


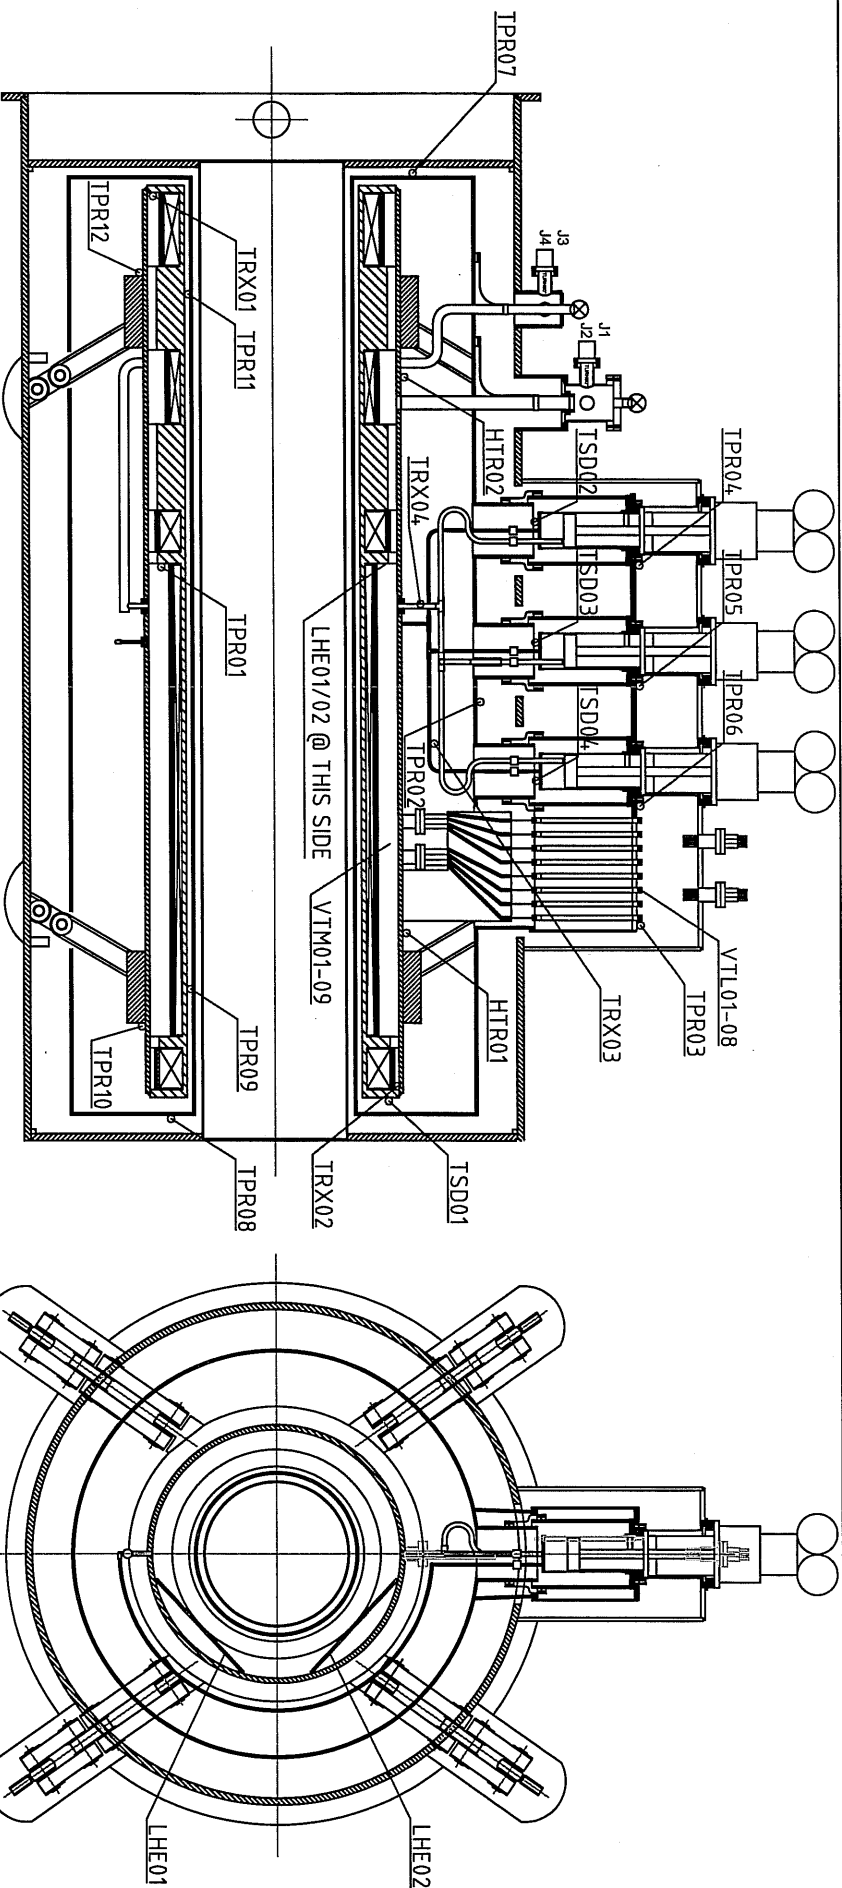

NOTE:
 VTM()=VOLTAGE TAP @ MAGNET
 VTL ()=VOLTAGE TAP @ LEAD
 TPR()=TEMPERATURE SENSOR, PT102
 TRX()=TEMPERATURE SENSOR, CERNOX
 LHE()=LIQUID HELIUM SENSOR
 HTR()=HEATER RESISTER
 TSD()=TEMPERATURE SENSOR, SI DIODE

J1	J2
J1-1A TPR01+V	J2-1A VTM01
J1-2B TPR01-V	J2-2B VTM02
J1-3C TPR01+I	J2-3C VTM03
J1-4D TPR01-I	J2-4D VTM04
J1-5E TRX01+V	J2-5E VTM05
J1-6F TRX01-V	J2-6F VTM06
J1-7G TRX01+I	J2-7G VTM07
J1-8H TRX01-I	J2-8H VTM08
J1-9J TRX02+V	J2-9J VTM09
J1-10K TRX02-V	J2-10K
J1-11L TRX02+I	
J1-12M TRX02-I	
J1-13N LHE01+V	
J1-14P LHE01-V	
J1-15R LHE01+I	
J1-16S LHE02+V	
J1-17T LHE02-V	
J1-18U LHE02+I	
J1-19V COMM	

J3	J4
J3-1A VTL01B	J4-1A TPR02+V
J3-2B VTL02A	J4-2B TPR02-V
J3-3C VTL03D	J4-3C TPR02+I
J3-4D VTL04C	J4-4D TPR02-I
J3-5E VTL05F	J4-5E TPR03+V
J3-6F VTL06E	J4-6F TPR03-V
J3-7G VTL07G	J4-7G TPR03+I
J3-8H VTL08H	J4-8H TPR03-I
J3-9J HTR01A	J4-9J TPR04+V
J3-10K HTR01B	J4-10K TPR04-V
J3-11L HTR02A	J4-11L TPR04+I
J3-12M HTR02B	J4-12M TPR04-I
J3-13N TPR10+V	J4-13N TPR05+V
J3-14P TPR10-V	J4-14P TPR05-V
J3-15R TPR10+I	J4-15R TPR05+I
J3-16S TPR10-I	J4-16S TPR05-I
J3-17T TPR11+V	J4-17T TPR06+V
J3-18U TPR11-V	J4-18U TPR06-V
J3-19V TPR11+I	J4-19V TPR06+I
J3-20W TPR11-I	J4-20W TPR06-I
J3-21X TPR12+V	J4-21X TPR07+V
J3-22Y TPR12-V	J4-22Y TPR07-V
J3-23Z TPR12+I	J4-23Z TPR07+I
J3-24a TPR12-I	J4-24a TPR07-I
J3-25b TSD01+V	J4-25b TPR08+V
J3-26c TSD01-V	J4-26c TPR08-V
J3-27d TSD01+I	J4-27d TPR08+I
J3-28e TSD01-I	J4-28e TPR08-I
J3-29f TSD02+V	J4-29f TPR09+V
J3-30g TSD02-V	J4-30g TPR09-V
J3-31h TSD02+I	J4-31h TPR09+I
J3-32i TSD02-I	J4-32i TPR09-I
J3-33j TSD03+V	J4-33j TRX03+V
J3-34k TSD03-V	J4-34k TRX03-V
J3-35m TSD03+I	J4-35m TRX03+I
J3-36n TSD03-I	J4-36n TRX03-I
J3-37p TSD04+V	J4-37p TRX04+V
J3-38q TSD04-V	J4-38q TRX04-V
J3-39r TSD04+I	J4-39r TRX04+I
J3-40s TSD04-I	J4-40s TRX04-I

TRACKER #1	SENSOR SERIAL
TRX01	TPR06 P13641 TSD03
TRX02	TPR07 P13605 TSD04
TRX03	TPR08
TRX04	TPR09
TPR01	TPR10
TPR02	P13640 TPR11
TPR03	P13639 TPR12
TPR04	P13195 TSD01
TPR05	P13209 TSD02