



HCX™ Purification Medium NANOCHEM® Inert Gas Purifiers

Removal of Hydrocarbons from Inert Gases & Hydrogen

Overview

NANOCHEM® HCX™ Purifiers are designed to remove trace hydrocarbons from inert gases and hydrogen. An example of a process sensitive to hydrocarbon contamination is DUV lithography. Deposition of carbon-based films from purge gas contaminants on the optical components decreases light throughput and negatively affects the patterning process.

NANOCHEM® HCX™ purification medium, the active component in White Knight™ (WK-Series) Purifiers, removes non-methane hydrocarbons with sub-ppb efficiency and high capacity for extended purifier lifetime.

Applications

- Purge gas purification for photolithography where trace hydrocarbons are detrimental to transmission of optical components (carbon deposits)
- Compatible gases include Nitrogen (N₂), Helium (He), Neon (Ne), Argon (Ar), Krypton (Kr), Xenon (Xe), Hydrogen (H₂), Deuterium (D₂), CDA, and Sulfur Hexafluoride (SF₆)

Features and Benefits

- Custom-designed adsorbent material for point-of-use hydrocarbon removal offering:
 - **High Capacity**
 - **Long Lifetimes**
 - **Sub-ppb Efficiency** for non-methane hydrocarbon removal in inert gases (N₂, He, Ne, Ar, Kr, Xe) and Hydrogen (H₂)
 - **Low Overall Cost of Ownership**
- Room temperature operation - no power required
- No conditioning required
- Easy to install and operate
- Media refills available for WK-500F-HCX and WK-2500F-HCX purifier models
- Patented technology

Specifications

- 0.003 µm particle filter with 9-log retention (99.999999%)
- Internal surface finish < 10 µin R_a
- Metal parts of Stainless Steel, Type 316L
- Maximum operating temperature of 40°C (104°F)

n-Butane Removal by NANOCHEM® HCX™ Purifier

Capacity

Large capacity of HCX™ purifier for n-butane removal was experimentally verified by FTIR (Figure 1). Heating to 100°C and extended purging with inert gas did not release adsorbed n-butane, indicating strong affinity for hydrocarbons.

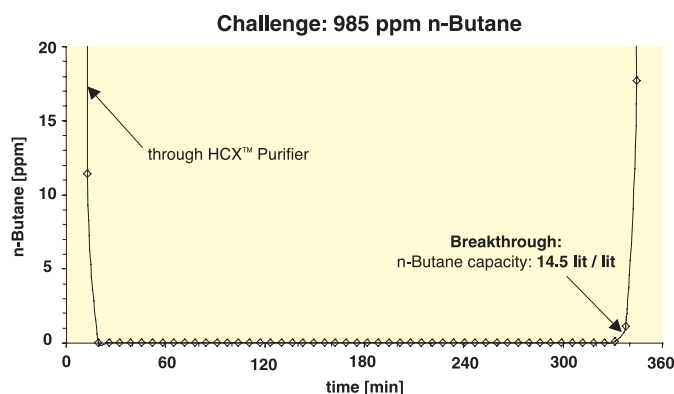


Figure 1: n-Butane Capacity of HCX™ Purifier
30 ml bed volume, 958 ppm challenge at 1.4 slpm (0.8 NM³/hr)

FTIR (Fourier Transform Infrared Spectroscopy)

Efficiency

APIMS measurements indicate removal of n-butane to < 100 ppt (Detection Limit of APIMS) at challenges as high as 50 ppm (Figure 2). Purifier was initially bypassed for < 25 minutes to verify instrument response.

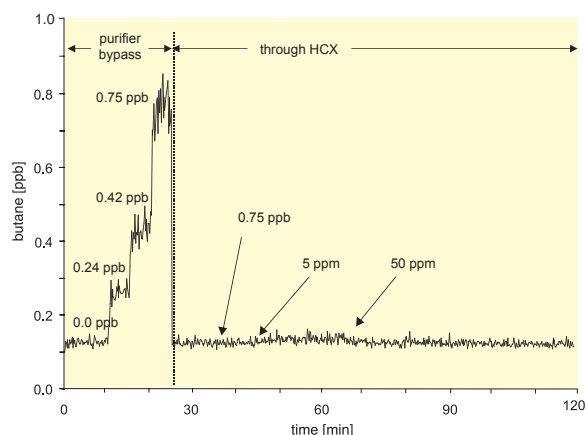


Figure 2: Efficiency of HCX™ Purifier for n-butane removal at challenges from 0.75 ppb to 50 ppm. (200 ml bed volume)

ppt – parts per trillion

APIMS (Atmospheric Pressure Ionization Mass Spectrometry)



**MATHESON
TRI•GAS**

ask. . .The Gas Professionals™

Purifier Models / Sizes

NANOCHEM® HCX™ purification medium is available in a wide variety of hardware configurations for point-of-use, distribution, source and bulk purification applications:

Model	Maximum Recommended Flow Rate**		Media Volume ml or liters	Maximum Allowable Operating Pressure Without End-Point	
	slpm	(NM ³ /hr)		psig	(MPa)
MiniSentry™	1	(0.06)	12 ml	3,000	(21)
Purifilter®	3	(0.2)	25 ml	1,000	(7)
A-Series*	50	(3)	300, 500, 2000 ml	500	(3.55)
L-Series	8-150	(0.5-9)	60, 300, 500, 2000 ml	500	(3.55)
C / CL-Series	50-150	(3-9)	300, 500 ml	500	(3.55)
H-Series	50	(3)	300, 500 ml	500	(3.55)
HP-Series	50	(3)	500 ml	2,850	(19.8)
P-Series	150-400	(9-24)	4, 8, 16, 32 liters	350	(2.51)
MS-Series	1000	(60)	8, 16, 32 liters	300	(2.17)
WK-Series*	3-250	(0.2-15)	55, 500, 2500 ml	500	(3.55)
	1000	(60)	9 liters	350	(2.51)

*Drop-in replacements available for competing hardware designs.

**For higher flow rates, contact Matheson Tri-Gas, Inc.

NOTE: 0.003 µm particle filter with 99.999999% retention standard on all models.

Please contact your local Matheson Tri-Gas, Inc., Sales Engineer or call (215) 648-4000 to obtain a purifier lifetime estimate for your specific operating conditions.

Equipment Technology Center

166 Keystone Drive
 Montgomeryville, PA 18936
 Tel: 800-828-4313 • Fax: 215-619-0458
 Email: Info@matheson-trigas.com

Specifications are subject to change. Please check www.mathesontrigas.com for most current information.

MiniSentry, White Knight and HCX are trademarks of Matheson Tri-Gas, Inc.
 MATHESON TRI-GAS, NANO-CHEM and PuriFilter are registered trademarks of Matheson Tri-Gas, Inc.
 VCR is a registered trademark of Swagelok Company
 Printed in USA PB035 R01/05



**MATHESON
 TRI•GAS**

ask . . . The Gas Professionals™